



LEGENDEX ROCK SLIDERS

PRODUCT CODE: P-RS-CHV-1

Chevy Sliverado 1500 2018-current



CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

COMPONENTS

P-RS-CHV-1 SLIDER PASSENGER SIDE x 1

P-RS-CHV-1 SLIDER DRIVERS SIDE x 1

RS-BOLT BOLTS x 8

TOOLS REQUIRED

- 19mm Spanners | Ratchet Spanner Ideal
- Bottle Jack | Trolley Jack Ideal
- Timber Block | Rubber Ideal
- Rubber Mallet
- Floor Mat
- Portable Light
- Flat Head Screwdriver | Large

IMPORTANT BEFORE INSTALLATION

- If you have had electrical work completed – please check chassis for existing wiring. You will not be able to install until this has been removed and re-wired.
- Before installing your sliders park your vehicle on level ground ensuring it is in gear (or Park) and the handbrake is applied. Never use a jack to support the weight of the vehicle while working on it.
- Wear protective clothing including eye wear


REMOVING ORIGINAL SIDE STEPS

- BEFORE YOU START – DOUBLE CHECK – that you have the correct sliders for the job.
- Check the invoice and the packaging.
- Remove packaging: Check you have all the correct parts and no damage from freight.
- You might need to wash the underbody before starting the job.
- Generously spray the bolts with WD40 (or other spray lube) and leave to penetrate.
- Each 4wd is different so you'll need to identify the correct spanner size
- Once remover – KEEP just in case.

INSTALLING YOUR NEW ROCK SLIDERS

STEP 1

Unpack and remove the bolts attached to the mounting points and put these side.

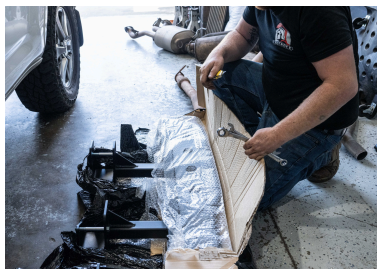

DRIVER SIDE

STEP 2

Align the Slider to ensure the front bracket is lined up with the existing hole in the chassis and the three remaining brackets cup the chassis



INSTALLING YOUR NEW ROCK SLIDERS

PRODUCT CODE: P-RS-CHV-1

STEP 3

Once the front Bracket is aligned with the hole in the chassis put the Bolt through the hole. Place the washer on the other side (the inner chassis spot) then do up the bolt.



PLACE WASHER IN HERE



STEP 4

Then bolt up the rear and middle brackets so they cup the chassis. The bracket will slot in-place between the chassis. Any hoses or lines on the top of the chassis the bolt will go underneath as shown in image 2



STEP 5

Once all bolts are one go through and tighten them all. There is no torque setting just tighten them as tight as possible

PASSENGER SIDE

STEP 6

Align the Slider to ensure the front bracket is lined up with the existing hole in the chassis and the three remaining brackets cup the chassis, you will need to un-clip the lines in order for the bracket to slot into place



INSTALLING YOUR NEW ROCK SLIDERS

PRODUCT CODE: P-RS-CHV-1

STEP 3

Just like the driver side once the front Bracket is aligned with the hole in the chassis put the Bolt through the hole. Place the washer on the other side (the inner chassis spot) then do up the bolt.



PLACE WASHER IN HERE



STEP 4

Then bolt up the rear and middle brackets so they cup the chassis. The bracket will slot in-place between the chassis. Any hoses or lines on the top of the chassis the bolt will go underneath.



STEP 5

Once all bolts are one go through and tighten them all. There is no torque setting just tighten them as tight as possible



THANKS FOR JOINING THE LEGENDEXNATION

If you're on Facebook or Instagram we would love to show off your vehicle on our page. Simply use the hashtag #legendexnation in a post with photos of your Legendex product you can also tag us using the tags below and we will feature your vehicle.

@legendex on Facebook and Instagram