



LEGENDEX ROCK SLIDERS

PRODUCT CODE: P-RS-RAN-5

Ford Ranger Next-Gen 2022+

PRODUCT CODE: P-RS-RAN-5



CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

COMPONENTS

P-RS-RAN-5	SLIDER PASSENGER SIDE x 1
P-RS-RAN-5	SLIDER DRIVERS SIDE x 1
RS-BOLT	BOLTS x 6

TOOLS REQUIRED

- 19mm Spanners | Ratchet Spanner Ideal
- Bottle Jack | Trolley Jack Ideal
- Timber Block | Rubber Ideal
- Rubber Mallet
- Floor Mat
- Portable Light
- Flat Head Screwdriver | Large

PRODUCT CODE: (P-RS-RAN-5)

IMPORTANT BEFORE INSTALLATION

- If you have had electrical work completed – please check chassis for existing wiring. You will not be able to install until this has been removed and re-wired.
- Before installing your sliders park your vehicle on level ground ensuring it is in gear (or Park) and the handbrake is applied. Never use a jack to support the weight of the vehicle while working on it.
- Wear protective clothing including eye wear

REMOVING ORIGINAL SIDE STEPS

- **BEFORE YOU START – DOUBLE CHECK** – that you have the correct sliders for the job.
- Check the invoice and the packaging.
- Remove packaging: Check you have all the correct parts and no damage from freight.
- You might need to wash the underbody before starting the job.
- Generously spray the bolts with WD40 (or other spray lube) and leave to penetrate.
- Each 4wd is different so you'll need to identify the correct spanner size
- Once remover – KEEP just in case.

INSTALLING YOUR NEW ROCK SLIDERS

STEP 1

Unpack and remove the bolts attached to the mounting points and put these side, align the slider with the body and chassis using a jack



STEP 2

Align the Slider to ensure the front bracket is lined up with the existing hole in the chassis and the two remaining brackets to cup the chassis

INSTALLING YOUR NEW ROCK SLIDERS

PRODUCT CODE: P-RS-RAN-5


STEP 3

Once the front Bracket is aligned with the hole in the chassis put the Bolt through the hole. Place the Washer on the inner chassis side where it slots into the place and then tighten the nut into place



STEP 4

Then bolt up the rear and middle bracket so they cup the chassis. The bracket will slot in-place between the chassis and any lines on the chassis.

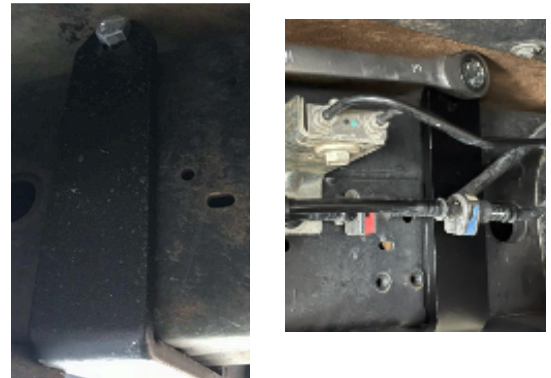

THANKS FOR JOINING THE LEGENDEXNATION

If you're on Facebook or Instagram we would love to show off your vehicle on our page. Simply use the hashtag #legendexnation in a post with photos of your Legendex product you can also tag us using the tags below and we will feature your vehicle.

@legendex on Facebook and Instagram