



LEGENDEX ROGUE M.O.L.L.E

PRODUCT CODE: MR-JNY-FT

Suzuki Jimny Folding Table

PRODUCT CODE: MR-JNY-FT



CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

PRODUCT CODE: MR-JNY-FT

COMPONENTS

MR-JNY-FT-BP	Backing Plate	1	Tent Rope slider	Red	1
MR-JNY-FT-BL	swivel blade	1	Counter Sunk PH2	M4X20 SS 304	1
MR-JNY-FT-MP	Molle shelf	1	Dome Nut	M4 SS 304	1
CHSS38SS	Hinge	1	Button Head HEX4	M6 x 30 SS 304	10
Button head	M6 x25 ss304	2	Washer	M6 x 14mm SS 304/316	10
Wing Nut	M6 SS 304	1	Long Captive Nut	M6	10
Black Nylon Washer	M6 x 14mm	3	Black Nylon Washer	M6 x 14mm	2
Washer	M6 x 14mm SS 304/316	2	Foam Strip 900mm		1
Button Head PH2	M4X14 SS 304	2	Red paracord 700mm		2
Nyloc Nut	M4 SS 304	2	Cam Lock Cleat - Black		1
Nut Brass	M6 "thumb"	1			
BH5 TONNEAU LOOP		2			
BUTTON BLACK		2			

TOOLS REQUIRED

- 9mm Drill bit
- Hex4 Allen Key
- Screwdriver- Flat,
- Nutsert's gun

IMPORTANT

- Wear protective clothing including eye wear.
- Clean Hands work best.
- Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-JNY-FT

STEP 1

Start with double checking you all the correct nut & bolt, and all the components



STEP 2

Next remove the plastic backing board – use the flat head crew driver to pop it off- Put aside just in case you need it later



STEP 3

Double check the Table holes line up with the Jimny holes

If you like it can be easier to mount the table, if you separate the backing board from the drop table and the blade



STEP 4

With the 9mm drill bit drill out all the holes, which are 8mm so it will be easy. After that apply an anti-rust spray to the fresh drill holes, (could use paint)

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-JNY-FT

STEP 5

Now bolt up the table- start at the edges and only do up finger tight, this will allow play, so all the bolts can be fitted

STEP 6

Before you tighten up the top center bolts, this is when you fit in you foam strip, this can take a few attempts at lining it up to look perfect, Once you are happy- start to tighten all the bolts




STEP 7

Step back and check you are happy with the alignment and all the holes are correct before setting up the rope ties

STEP 8

On the LH Side thread one end of the red paracord through the hole top of the red anodized loop and knot closely to the end of paracord.

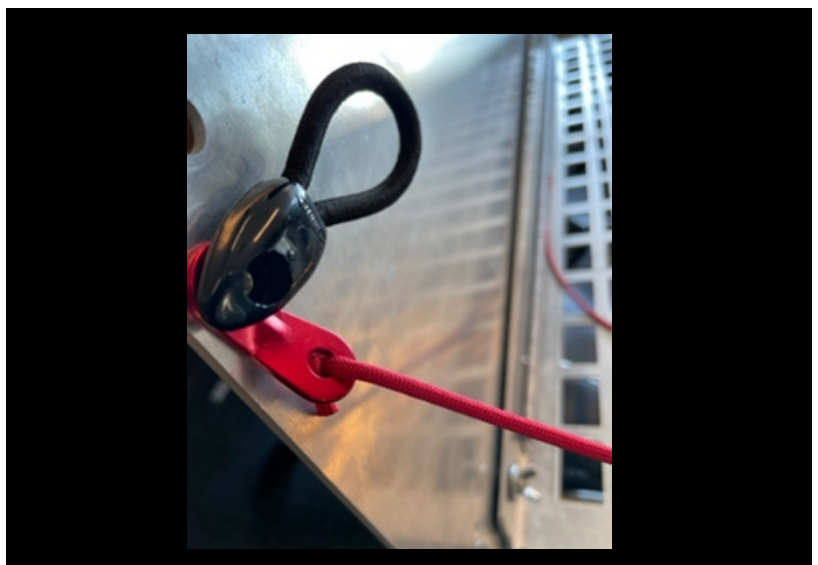

INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-JNY-FT

STEP 9

On the opposite end thread through the front of the MOLLE panel. (Thread from the outside and Knot at your desired length and cut off excess) (Carefully sear rope end to prevent fraying)




STEP 10

On the RH Side thread one end of the red paracord through the hole on the front of the MOLLE panel First. (Thread from the outside and knot on the inside)

Thread the Para cord through the Paracord cleat (front hole only)

Then Trim to desired length making sure the table is at the lowest height position first.

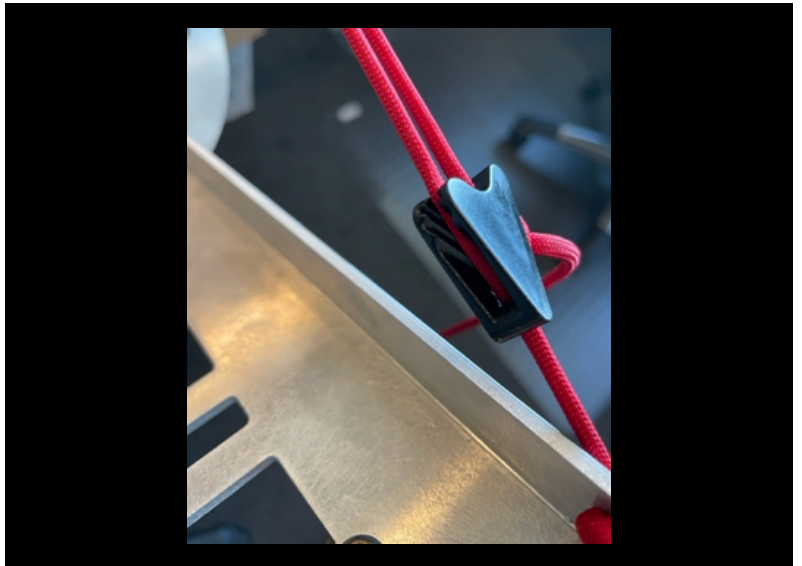

FINAL STEPS ONCE M.O.L.L.E. IS MOUNTED

- Double check all nuts and bolts are tight.
- RE-connect your battery.
- You may now start the vehicle and run at idle for a couple of minutes and listen for any vibration / rattle noises.
- Also, re-check tightness of the bolts after 20-50km

NOTES



THANKS FOR CHOOSING A LEGENDEX PRODUCT

If you're on Facebook or Instagram we would love to show off your vehicle on our page. Simply tag us in a post with photos of your Legendex product using the tags below and we will feature your vehicle. @legendex on Facebook and Instagram

