



# LEGENDEX ROGUE M.O.L.L.E

PRODUCT CODE: MR-80-R-1

**80 Series Roof Console Kit**

PRODUCT CODE: MR-80-R-1



## CHECK YOUR PACK LIST

Once you have unpacked the system from the box make sure you have all parts that are listed on the packing list below.

### COMPONENTS

MR-80-R-B2	FRONT BRACKET	1	BUTTON HEAD	M4x12 ss 304	5
MR-80-R-B	ROOF CONSOLE	1	NUT	M4 SS 304	5
MR-80-R-B1	REAR BRACKET	1	WASHER	M4 SS 304	5
MR-TOY-H-1	WIRING HARNESS	1	BOLT	M6x12 SS 304	6
WASHER	M6 SS 304	6			

### TOOLS REQUIRED

4mm Allen Key

Screw Driver

Flat Head Screw Driver

### IMPORTANT

- Wear protective clothing including eye wear.
- Clean Hands work best.
- Disconnect the Battery to ensure you don't earth out. Or Use an Auto-electrician.


# INSTALLING YOUR NEW ROGUE M.O.L.L.E

## STEP 1

Start with double-checking all the correct components and gathering the tools required.

## STEP 2

First, remove the screw from a courtesy light panel located at the top of the front windshield then remove the panel, once removed continue to remove the two large screws from the rear of the Overhead Dashboard as shown in the images

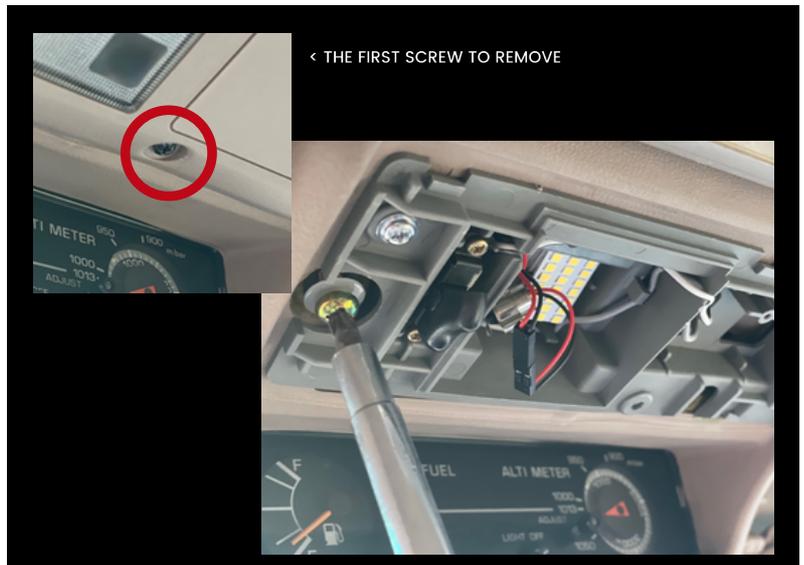

## STEP 3

Allow the overhead dashboard to hang loose then Slide the roof console front bracket into place between the hood lining and the overhead dash. Aligning the slots with the rear screw holes



## STEP 4

Refit the rear screws and check the bracket is held securely then Refit the courtesy light cover



# INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-80-R-1


## STEP 5

Remove the cover from the centre interior light using a flat-head screwdriver as shown in the image




## STEP 6

Remove the 4 factory screws holding the panel up then remove the panel by unplugging the factory wiring harness

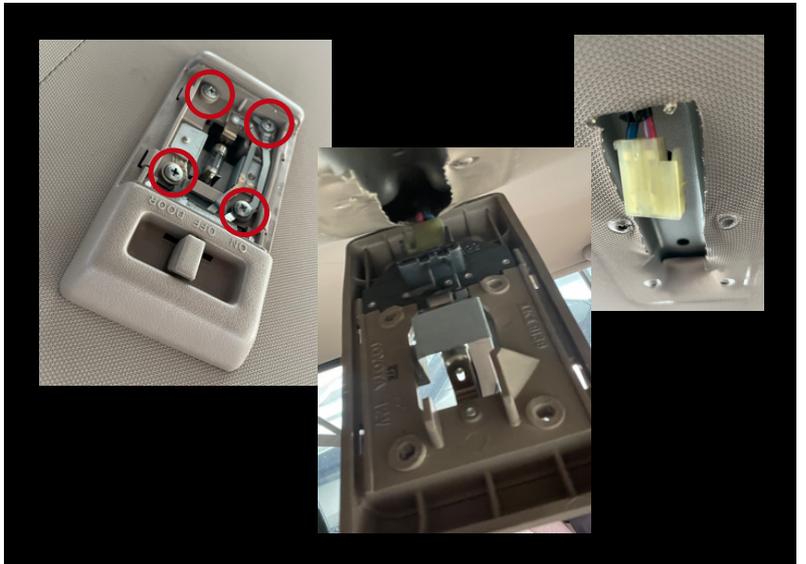

## STEP 7

Fit the Rogue M.o.l.l.e rear bracket using the factory screws and 6mm washers provided.

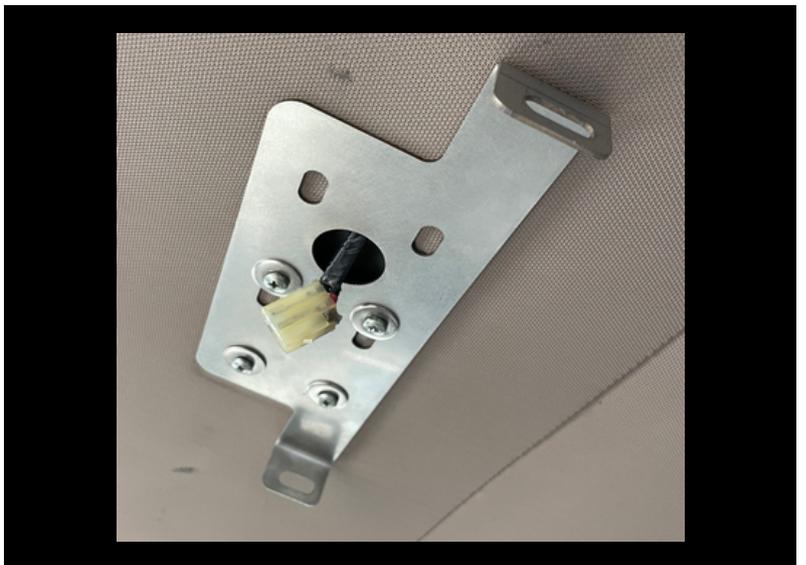

# INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-80-R-1

## STEP 8

Next, Fit the wiring harness –  
The wiring harness is colour coded.  
Match the blue and red wires, and fit  
the earth to the closest mounting  
screw on the interior bracket.



## STEP 9

Bolt the body of the roof console to  
the front and rear brackets installed  
earlier, we recommend a loose fit at  
this stage of the installation process



## STEP 10

Pull the wiring harness through the  
interior light cut-out and fit it to the  
interior light. Identify the earth bolt on  
the interior light to fit the earth cable.




# INSTALLING YOUR NEW ROGUE M.O.L.L.E

PRODUCT CODE: MR-80-R-1

## STEP 11

Fit the interior light to the body using the bolts and nuts provided

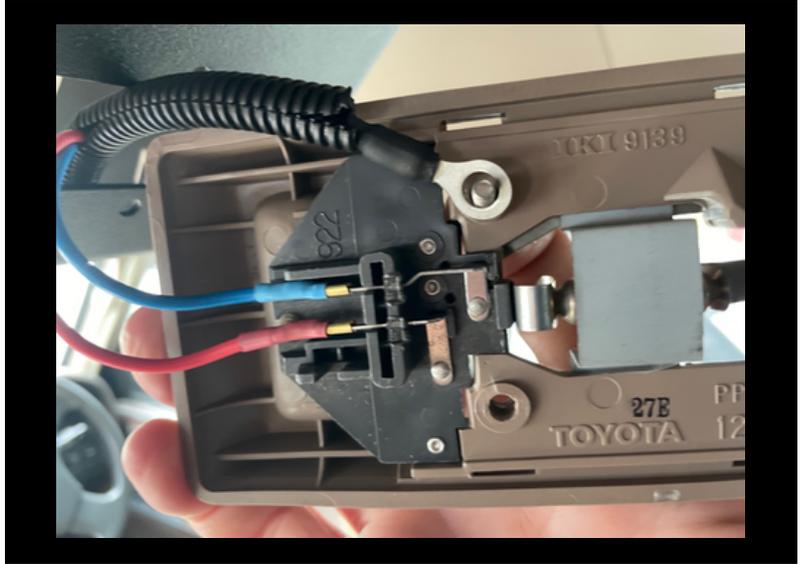

## STEP 12

Align the body of the roof console to your desired fitment against the roof lining and tighten the mounting bolts.



## STEP 13

Refit the battery cable and test the interior light functionality



